

# **READ THIS BEFORE ASSEMBLY**

## **WARNING**

For your safety and continued enjoyment

- This outdoor product is not designed for indoor use. It is not designed to heat a home or create lighting for a home. Indoor use will be detrimental to a persons' health and will cause extensive property damage as well as death to anyone using it indoors.
- Before assembly, make sure the use of this Outdoor Hearth product does not conflict with any local or state codes. Contact your local Police or Fire Department regarding the use of this product.
- Fire can cause severe physical harm to an individual. For safety concerns it is recommended that any person using this product not use alcohol, prescription, non-prescription drugs and/or anything that will impair their judgment.
- This product is not for commercial use.
- This Hearth product is made for outdoor use only, it cannot be used inside a building or within 50 feet of any building or overhead structure.
- This Outdoor Fireplace is designed specifically for burning only wood. Do not burn any other flammable substance.
- When using this outdoor fireplace in the presence of children, make sure they are supervised.
- Never leave an Outdoor Hearth product unattended while in use.
- Always keep people a safe distance from an outdoor fireplace when it is in use. Never lean over a burning fire.
- Read and follow your Chiminea/Fire Pit use and care instructions completely before using.
- Make sure your Outdoor Fireplace is assembled correctly; there will be no extra parts.
- Do not use this outdoor fireplace until it is completely assembled.
- Check and tighten all connections before each use. Do not use unless all screws and connections are secure and in place.
- Do not use your outdoor fireplace near Recreational vehicles, cars, trucks or vans.
- Do not use this outdoor fireplace under any overhead structure, including trees, shrubs, awnings or any other combustible materials.
- Do not use this outdoor fireplace in an atmosphere of combustible fumes or vapors.
- Do not use or store any combustible liquids in the vicinity of any outdoor hearth product.
- Do not stack anything on top of your outdoor hearth product.
- Do not position this outdoor fireplace in a confined area. It must be positioned on a firm, level surface. Never place directly on a wood or plastic surface and keep away from wooden fences or any kind of overhead obstruction.
- Do not position on an asphalt or blacktop surface. Although hard, these surfaces will melt when exposed to high temperature. Protective pads are available.

- **Do not** ignite this outdoor fireplace within 20 feet from Liquid Propane or natural gas cylinder.
- **Do not** place any electrical cords near this product.
- **Do not** alter or customize this outdoor hearth product for any reason.
- **Do not** use any outdoor fireplace that has been changed in any way from its' original design.
- **Always** check and **clean** spark arrestor before lighting your fire
- **Always** have a **Fire Extinguisher** nearby when using your outdoor fireplace
- Before starting a fire, you must check wind direction and velocity in your area.
- **Do not** use your outdoor fireplace under **windy** conditions.
- **Use** protective gloves when operating your outdoor fireplace.
- **Do not** use any flammable liquid (i.e. gasoline, kerosene, alcohol, lighter fluid, paint thinner etc.) to light or re-light a fire.
- **Never extinguish** your fire with water.
- **Do not** use any outdoor hearth product unless all screens are securely in place.
- **Before** lighting a fire always make sure spark arrestor screens are securely in place at the top of the chimney.
- **Do not** wear loose fitting clothing when operating any outdoor hearth product.
- **Do not** touch this outdoor fireplace, its' handles, support legs, screens or body while in use.
- **Do not** move this outdoor fireplace while it is in use.
- **Do not** load firewood for burning through the top of the chimney.
- During use, **do not** place wood or any other flammable material under or on the bottom of this outdoor fireplace.
- **Do not** overload your outdoor fireplace with wood. For safety, all materials for burning must stay inside the fireplace and not protrude beyond its' surface.
- **Do not** use unless all screens and/or doors can fit securely in place,
- **Do not** leave your outdoor fireplace unattended until all fire is **extinguished** and any coals or embers **no longer glow**.
- **Do not** use your hands to check for HOT embers!
- **Always** use Fireplace Tools when adding firewood or moving burning embers.
- **Always** clean and cover your outdoor fireplace after the fire is extinguished and the Outdoor Hearth Product has had time to cool down. **DO NOT COVER** your outdoor fireplace until it has cooled to ROOM TEMPERATURE.
- **Do not** clean with high power or pressure washer.
- To preserve your Outdoor Hearth product, always check for loose, chipped or peeling paint. If found be sure to sand the surface and paint with **heat resistant paint**.